

# Instruction Sheet

## JCL-33 Temp Controller

JCL\_SP\_Instruct\_092105.doc

### Key descriptions:

Keys, in order from Left to Right, on controller.

Arrow Up –	Increment value in display
Arrow Down -	Decrement value in display
Circular Arrow -	Accept value entry (Enter Button)
Circle with line -	On/Off button

### Setting Temp SP:

The machine uses only one temperature set-point, #1. The JCL-33 comes standard with two available set points. Set point #1 is set as follows.

- 1) Press the “Circular Arrow” key. Pressing this will cause the display to flash and The #1 will remain in the left portion of the screen.

The number that appears on the right side, is the current SP. Use the Arrow keys to change the set-point.

Press the Circular Arrow key to accept value.

- 2) The screen will now change and the number 2 will appear in the left portion of the screen. This set-point is unused. DO NOT ENTER A VALUE.

Press the Circular Arrow key to skip over this value.

- 3) The screen will now revert back to its typical operating screen.

The number 1 will be displayed with the actual temperature on the right side of the screen.